



ExMax – Revolution

Electrical, explosion proof rotary actuators size S

On-off, 24...240 VAC/DC, 95° Angle of rotation incl. 5° pretention

8 resp. 15 Nm with safety operation

Fast spring return < 1 sec.

PTB-tested in acc. with ATEX RL 94/9/EC for zone 1, 2, 21, 22.

ExMax - 8 - F1
ExMax - 8 - SF1
ExMax - 8 - BF1
ExMax - 15 - F1
ExMax - 15 - SF1
ExMax - 15 - BF1
ExMax - ... - VAS
ExMax - ... - CTS

Subject to change !

Compact. Easy installation. Universal. Cost effective. Safe.

Type	Torque	Supply	Motor running time	Spring return	Control mode	Additional features	Wiring diagram
ExMax - 8 - F1	8 Nm	24...240 VAC/DC	3/15/30/60/120 sec. at 90°	< 1 at 90°	On-off	-	SB 1.4/1.5
ExMax - 8 - SF1	8 Nm	24...240 VAC/DC	3/15/30/60/120 sec. at 90°	< 1 at 90°	On-off	2 contact (5/85°)	SB 1.4/1.5
ExMax - 8 - BF1	8 Nm	24...240 VAC/DC	3/15/30/60/120 sec. at 90°	< 1 at 90°	On-off	2 contact (5/85°) + fire trigger connection	SB 7.5/7.6
ExMax - 15 - F1	15 Nm	24...240 VAC/DC	3/15/30/60/120 sec. at 90°	< 1 at 90°	On-off	-	SB 1.4/1.5
ExMax - 15 - SF1	15 Nm	24...240 VAC/DC	3/15/30/60/120 sec. at 90°	< 1 at 90°	On-off	2 contact (5/85°)	SB 1.4/1.5
ExMax - 15 - BF1	15 Nm	24...240 VAC/DC	3/15/30/60/120 sec. at 90°	< 1 at 90°	On-off	2 contact (5/85°) + fire trigger connection	SB 7.5/7.6
ExMax- ... - VAS	Type as above but with stainless steel housing for aggressive ambient (12 × 12 shaft, shaft manual override, cable glands and hollow rivet nickel-plated)						
ExMax- ... - CTS	Type as above but with aluminium housing and Amercoat painting (12 × 12 shaft connection, shaft manual override, cable glands and hollow rivet nickel-plated)						

Application

Fire Damper



Ball valve



Throttle valve



Original view ExMax-...-F1



Description size S

The new ExMax actuators are a revolution for safety, fire and shut-off dampers and other motorized applications in chemical, pharmaceutical, industrial and Offshore-/Onshore plants, for use in Ex-areas zone 1, 2 (gas) and zone 21, 22 (dust).

Highest protection class (ATEX) and IP 66 protection, small dimensions, only 3,5 kg weight, universal functions and technical data, an integrated heater and an optional stainless steel housing guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

Special tools or equipment are not required. 5 motor running times are selectable or adjustable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24...240 VAC / DC.

The actuators are 100% overload protected and self locking.

ExMax-...-F1 actuators are equipped with spring return fail safe function.

Further the ExMax-...-SF1 with integrated aux. switches for end position indication and the ExMax-...-BF1 with an additional circuit to connect an external passive potential free thermostat Type ExPro-TT-...

Standard shaft connection is a double squared direct coupling with 12 × 12 mm.

Different accessories are available to adapt aux. switches, terminal boxes or adaptations for ball valves and throttle valves.

Highlights

- For all type of gas, mixtures, vapours and dust for use in zone 1, 2, 21 and 22
- Universal supply unit from 24 to 240 VAC/DC
- Circuit for directly connection of a thermal trigger sensor (option -BF1)
- 2 integral aux. switches, switching at 5° and 85° angle of rotation (option -SF1)
- 5 different motor running times (3-15-30-60-120 sec./90°), adjustable on site
- spring return running time < 1 sec./90°
- On-off control with spring return function
- 100 % overload protected, selflocking
- Compact design and small dimension (L × W × H = 210 × 95 × 80 mm)
- Direct coupling to the damper shaft with double-squared connection 12 × 12 mm
- 95° Angle of rotation incl. 5° pre-tention
- Robust aluminium housing (optional stainless steel or marine coating)
- IP66 protection
- Simple manual override include + preparation for comfortable manual override
- Gear made of stainless steel and sinter metal
- Only 3,5 kg weight
- Integral heater for ambient temperatures down to -40°C
- Integral safety temperature sensor
- Integral equipment for manual adjustment (push button, lamp, switch)
- Preparation for adaptable aux. switches (type ExSwitch)



ExMax-...F1

Special makes

ExMax-...VAS/CTS

SCHISCHEK
 EXPLOSION PROOF

Technical data	ExMax-8-...F1	ExMax-15-...F1
Torque motor	8 Nm	15 Nm
Torque spring return (F)	min. 8 Nm	min. 15 Nm
Dimension of external torque	minimum 2 Nm (lower load reduce lifetime)	minimum 5 Nm (lower load reduce lifetime)
Supply voltage/Frequency	24...240 VAC/DC, $\pm 10\%$, self adaptable, Frequency 50...60 Hz $\pm 20\%$	
Dimension	max. starting currents see table (in acc. with voltage, $I_{start} \gg I_{rated}$), max. 20 W blocking position, approx. 16 W for heater	
Protection class	class I (grounded)	
Angle of rotation and indication	95°, incl. $\sim 5^\circ$ pre-tension, mechanical value indication	
Working direction	selectable by left/right mounting to the damper/valve shaft	
Motor running time	3 / 15 / 30 / 60 / 120 sec. at 90° selectable on site	
3 sec. mode - motor	In acc. with the supply voltage and external torque 3 to 4 sec at 90° Angle of rotation	
Motor	brushless DC Motor	
Spring return (F)	spring return in the event of loss of power or open wire 3	
Spring return running time (F)	spring return in < 1 sec. at 90°	
Safety operations at 1 sec (F)	min. 1.000 in acc. with construction of damper and ambient, consider minimum load	
Response time spring return	up to 1 sec. after power failure	
Control mode	On-off	
Thermal circuit	Additional circuit to connect a passive potential free thermostat as a safety sensor, e.g. type ExPro-TT or ExPro-TT-... in version ...-BF1	
ExPro-TT-... connection	direct to the actuator with M12 \times 1,5 fast connection	
Integrated aux. switches	2 aux. switches, switching at 5° and 85° Angle of rotation in types ...-SF1 and ...-BF1	
Axle of the actuator	double squared 12 \times 12 mm, direct coupling, 100 % overload protected	
Electrical connection	cable, ~ 1 m, diameter of wires 0,5 mm ² , for connection inside hazardous areas an Ex-e terminal box is required!	
Diameter of cable	$\sim \varnothing 7,1...9,3$ mm acc. to type	
Cable gland	M16 \times 1,5 standard - cable - and wire entries are integral part of explosions proof encapsulation; tested acc. to EN 60079-1	
Manual override	Manual override only if supply voltage is cut, use delivered socket wrench, slow motion, enough torque/force is required Attention: with manual operation of actuators with spring return danger of injury exists, with release/let go the allen key.	
Integral heater	integral heater, controlled, for ambient temperature down to -40°C	
Housing material	Aluminium die cast housing, painted (optional in stainless steel version AISI 316 - type ExMax-...-VAS, marine coating type ExMax ...-CTS)	
Dimensions	L \times W \times H = 210 \times 95 \times 80 mm, for diagramm see extra information "ME-S"	
Weight	$\sim 3,5$ kg Aluminium housing (stainless steel ~ 7 kg)	
Ambients	storage temp. -40...+70°C, working temperature -40...+40°C at T6 and -40...+50°C at T5	
Humidity	0...90 % RH, non condensing	
Operation mode at runningtime motor 3 sec	The motor will work in 3 seconds only after 1 minute voltage supply. While open/close-operation (open voltage supply and shut it down) the motor works only with speed 15 sec./90°	
Operation mode	at 15/30/60/120 sec. 100 % ED (ED = duty cycle)	
Self adjustment	if you select 3 sec. and 15 sec. mode for motor you need to start the self adjustment mode or the angle of rotation is less than 90°	
Maintenance	maintenance free, maintenance must be complied with regional standards, rules and regulations	
Wiring diagrams (SB)	SB 1.4 / 1.5 / 7.5 / 7.6	SB 1.4 / 1.5 / 7.5 / 7.6
Delivery	1 actuator, 1 m cable, double squared shaft connection 12 \times 12 mm, 4 screws M4 \times 100, 4 nuts M4 socket wrench for simple manual override	
Parameter at delivery	8 Nm, 30 sec./90°	15 Nm, 30 sec./90°

Explosion proof	ExMax actuators – size S	Accessories or special solutions – size S
PTB-tested	PTB 04 ATEX 1028 X	...-VAS above listed types in stainless steel housing AISI 316, parts nickel-plated
In acc. with ATEX	RL 94/9/EC (ATEX)	...-CTS above listed types in Al-housing with amercoat painting, parts nickel-plated
Approval for gas	II2(1)G Ex d [ia] IIC T6/T5 gas, mist, vapour, zone 1 and 2	ExBox-... Ex-e terminal boxes for zone 1, 2, 21, 22.
Approval for dust	II2(1)D Ex tD A21 [iaD] IP66 T80°C dust, zone 21 and 22	ExSwitch 2 external aux. switches, adjustable, for zone 1, 2, 21, 22
Identification	CE No. 0158	MKK-S mounting bracket for Ex-e terminal boxes type ExBox-... direct on actuator
EMC	2004/108/EC	KB-S clutch for damper shafts $\varnothing 10...20$ mm and $\square 10...16$ mm
Low voltage	2006/95/EC	HV-S comfortable manual override for ExMax actuators size S
IP-Protection	IP 66, in acc. with EN 60529	Adaptations various adaptations for dampers/valves on request
Potential compensation	external PA-terminal, 4 mm ²	BFH-S Mounting holder for actuators at fire danger area
		ExPro-TT-... Sensor with EC type examination certificate in acc. with ATEX
		AR-12-xx Reduction of square damper connection from 12 mm to 11, 10, 9, 8
		ExMax-... S19 Cable BFOU(i), ~ 2 m, 0,75 mm ² , $\sim \varnothing 12$ mm supply cable, SF1 $\varnothing 18$ mm limit switches Cable gland M25 brass nickel plated resp. M32x1,5



ExMax-...F1




Special makes

ExMax-...VAS/CTS


SCHISCHEK
EXPLOSION PROOF**Electrical connection**

ExMax actuators are equipped with a universal supply unit working at a voltage range from 24...240 VAC/DC. The supply unit is self adjustable to the connected voltage!

The safety operation of the spring return function works if the supply voltage is cut or open the wire no 3. For electrical connection inside hazardous areas an Ex-e terminal box, certificated in acc. with ATEX is required (e.g. ExBox).

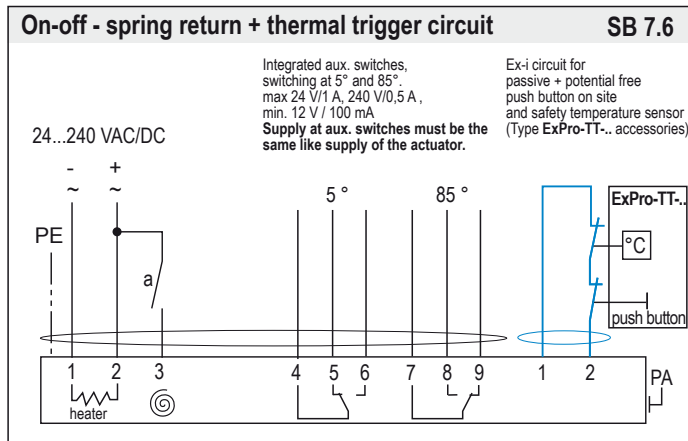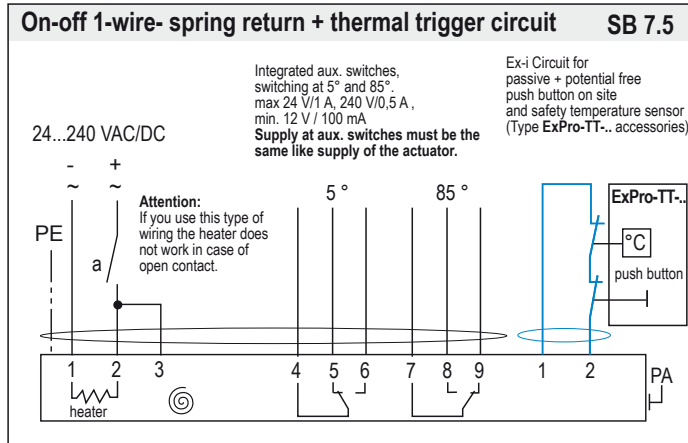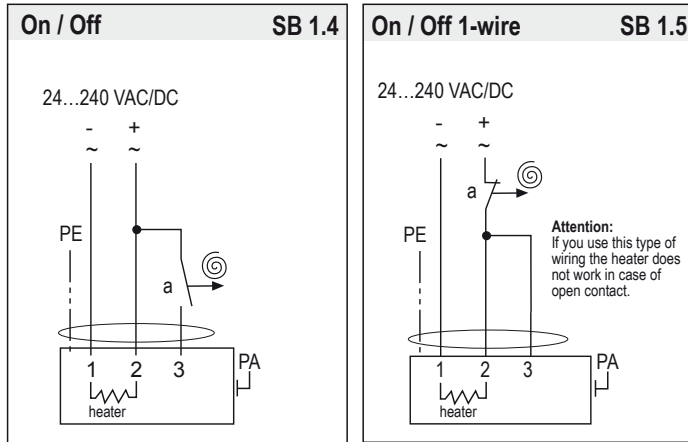Wiring diagram**Attention**

Never use actuators without external torque/force. If 3 sec. motor running time is selected, the self adjustment of Angle of rotation must be started and operation mode of max. 10% ED must be guaranteed. (1 cycle per minute)
In 1 wire connection is 3 sec motor running time not possible

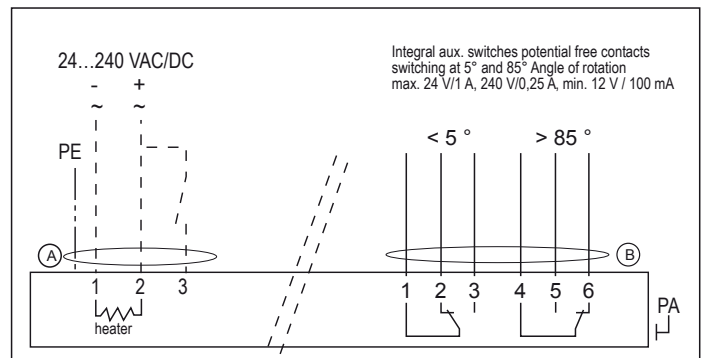
Wiring diagram ExMax-...SF1 with integral aux. switches**Parameter, Adjustment – Failure indication**

Switch – Push button – Lamp for adjustment, behind the blanking plug

10-position switch (S)

Push button (T)

3-colour LED

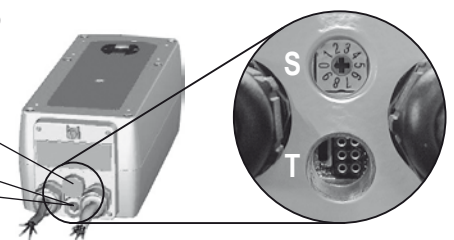**Parameter selection**

Example: ExMax-15-BF1

Requested parameter:

Torque 15 Nm

Running time motor 30 sec/90°

Result: switch position (S) 02

Type	Torques	
ExMax- 8-BF1	▶	8 Nm
ExMax-15-BF1	▶	15 Nm
Running times		
3 sec./90°	▶	00 05
15 sec./90°	▶	01 06
30 sec./90°	▶	02 07
60 sec./90°	▶	03 08
120 sec./90°	▶	04 09
Position of switch S		

Function, adjustment and parameter**A) Self adjustment of Angle of rotation:**

Switch (S) into position 02, then push button (T) for minimum 3 seconds. The actuator will drive into both end positions to be adjusted.

LED indicates green flashing. The actuator must be in position off.

Adjustment time needs approx. (30 sec. On, 1 sec. Off). After that, switch S into position 00-09 in acc. with your required torque and running time.

B) Selection of running time and torque:

Put switch (S) into the correct/selected position in acc. to above table.

The selected parameter will work at next operation of the actuator.

Adjustment can be done even without supply voltage. If supply voltage is available turn switch only if actuator is not running.

C) Additional information for operation:

a closed = actuator goes ON

a opened = spring return mode

Direction depends on left/right mounting of the actuator to the damper/valve.

D) Function of a passive sensor in the circuit:

If the sensor opens the circuit the actuator runs into its safety end-position with spring return.

Error indication

See extra information "EL"


Mounting instructions and important information for operation and installation
Important information for installation and operation
A. Installation, commissioning, maintenance

The cable of the actuator must be installed in a fixed position and protected against mechanical and thermal damage. In acc. with operation ExMax actuators are maintenance free. Nevertheless maintenance must comply with regional standards, rules and regulations. The flameproof enclosure is protected against mechanical shock in acc. with EN 60079 by the housing of the actuator.

The actuators must not be opened by the customer. For outdoor installation a protective housing against rain, snow and sun should be applied to the actuator, as well as a constant supply at terminal 1 and 2 for the integral heater. For electrical connection inside hazardous areas an Ex-e terminal box is requested (e.g. type ExBox).

Attention: If the actuator is put out of operation all Ex-rules and regulation must be applied.

Example: you have to cut the supply voltage before opening an Ex-e terminal box.

B. Shaft connection, selection of running time, heater

ExMax actuators are equipped with a direct coupling double squared shaft connection of 12 × 12 mm. For round shafts an adaptor is available (Accessory type KB-S).

The housing of the actuator is axially symmetrically built to select open/close direction of the spring return function by left/right mounting.

In acc. to the actuator type 5 different motor running times and 2 different spring return running times can be selected on site. The integral heater is for ambient temperatures down to -40°C.

C. Working with 3 sec. motor running time

See extra information "EL".

D. Spring return

Spring return function works if the supply voltage (terminal 1 or 2) is cut. In the event of an electrical interruption, the spring returns to its end position.

E. Operation at an ambient temperature below -20°C

See extra information "EL".

F. Excess temperature

In acc. to the ATEX rules and regulations Ex actuators must be protected against excess temperature. An internal thermostat guarantees the temperature class in the event of failure. If this thermostat is working the actuator must be sent to the factory. ExMax actuators are equipped with an additional temperature sensor to stop the actuator before reaching this max. temperature. In this case the failure must be eliminated immediately on site.

G. ExPro-TT..

The actuator ...-BF1 works only with the temperature sensor type ExPro-TT.. otherwise the LED shows red.

I. Synchron mode

Do not connect several actuators to one shaft or link mechanically together.

Important information for routine test

For periodic inspection of fire dampers cut of the the supply line (cut off the current of the actuator)

The switch contact on ExPro-TT.. is only for test aims of actuators function.

Extra information "EL-S" (see additional data sheet)

extra technical information, versions of circuit diagrams and failure indication

Extra information "ME-S" (see additional data sheet)

extra technical information, dimensions, installation instruction and illustration

Mounting on air dampers with double squared shaft connection


Details see extra information "ME"

Mounting on air dampers with clutch


Details see extra information "ME"

Mounting of quarter turn valves


Details see extra information "ME"

ExSwitch – adaptable external Ex-d aux. switches


ExSwitch is an accessory to ExMax actuators size S, fixing directly onto the actuator. ExSwitch are aux. switches with 2 potential free contacts, adjustable on site. The electrical wiring needs an Ex-e terminal box.

ExBox – adaptable Ex-e terminal box


For electrical connection of an ExMax inside the hazardous area an Ex-e terminal box is required.

ExBox-3P for ExMax...- F1

ExBox-YS for ExMax...-SF1

ExBox-BF for ExMax...-BF1

To adapt the ExBox direct to the actuator housing an additional accessory type **MKK-S** is required.

Ex-i safety temperature sensor – ExPro-TT


The safety thermostat type ExPro-TT.. is passive and potential free for use in intrinsic safe circuits, directly connectable to the Ex-i circuit of the ...-BF1 actuators. The sensor switches at an ambient temperature of 72°C and starts the fail safe spring return function of the actuator. Sensor with EC type examination certificate in acc. with ATEX.



F1 – extra information EL-S



The „EL-S“ data sheet contains additional information for ExMax, RedMax and InMax actuators of the size „S“, for the optimization and simplification in regard to planning, installation and initial startup. It provides influences of external factors in reference to the safe initiation of the actuators, as well as technical references and problem solutions (error indication). With the error indication, functions can be examined and different error/problems can be adjusted locally.

- Power supply design
- Design of line cross section 24...48 VAC/DC
- Use at ambient temperatures down to -20°C / - 40°C
- Error indication - problem treatment/solution

For additional mechanical data have a look at extra information „ME“

Power input depending of supply voltage

Power supply design

The design of the on-site supply, depends on the selected motor running time and selected supply voltage. Accompanying values are "about values", since there can be construction unit dispersions within electronics. The power consumption in the blocking position is run time independently with max. 20 W. The power consumption for the heater is between 5 and 12 W. The heading is running only if the motor is in idle position! The initial starting supply voltage required by the actuators power supply unit is around 2,0 A for about 1 Sec. (Please consider this while concepting the cross section of the supply line)

Voltage	Current	Rated current in acc. with motor running time				
		3/7,5s	15s	30s	60s	120s
240 V	Inominal	0,5 A	0,1 A	0,1 A	0,1 A	0,1 A
120 V	Inominal	0,8 A	0,3 A	0,2 A	0,2 A	0,2 A
48 V	Inominal	2,0 A	0,6 A	0,3 A	0,3 A	0,3 A
24 V	Inominal	4,7 A	1,3 A	0,7 A	0,6 A	0,5 A

Dimensioning of the line cross section with 24...48 VAC/DC supply voltages

Dimensioning/Design of the supply line

On long distances between voltage supply and drive, voltage drops occur due to line resistances. As a consequence with 24 VAC/DC the actuator receives a too low tension and does not start. In order to prevent this, the cross section of the inlet line is to be designed/dimensioned accordingly. The accompanying formula allows the calculation of the necessary line cross section, perhaps provides the maximally permitted conduit length utilizing the existing line cross section. Alternatively the secondary voltage can be increased by selecting a transformer. For calculation purposes, following characteristics are essential:

UV = supply voltage in [V]

A = line cross section in [mm²]

L = conduit length in [m]

Factor 0.0714 = drive-specific factor

[Vmm²/m] (based on the electrical conductivity of electrolytic copper with a coefficient of 56m/Wmm²)

Formula for max. cable length „L“ at cable cross section „A“


$$L = A \cdot (U_v - 18V) : 0,0714$$

Example: A = 1,5 mm², U_v = 24 V
Length of cable L = 126 m

Formula of needed cable cross section „A“ at a cable length of „L“

$$A = 0,0714 \cdot L : (U_v - 18V)$$

Example: L = 250 m, U_v = 30 V
Cross section of A = 1,5 mm²

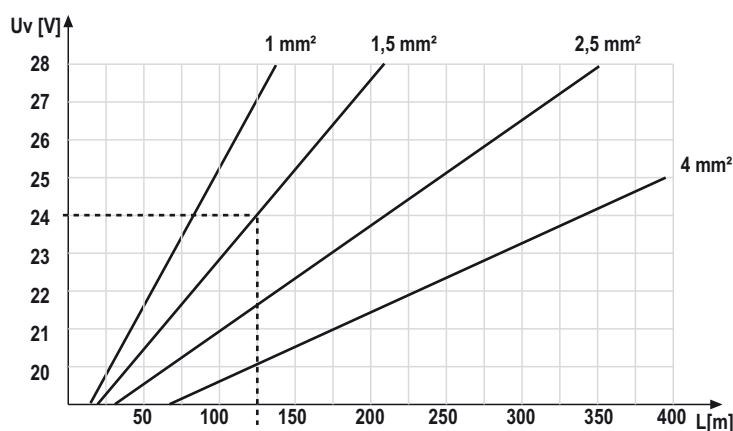

Example:

24 V power supply with wire diameter 1,5 mm² = 126 m



Error indication

Error/Symptom	Reason	Solution
01 Actuator does not work LED does not lights	<ul style="list-style-type: none"> No power supply attached The actuator is operated beyond ex-prevention ambient temperature specifications and the internal temperature sensor did irreversibly shut down operations 	<ul style="list-style-type: none"> Attache power supply and turn on Because of inadmissible operation the actuator drove out of safety relevant reasons into an irreversible condition and must be exchanged. Accompanying new installation the ambient temperature has to be reduced accordingly
02 Actuator does not work LED lights red	<ul style="list-style-type: none"> The actuator is operated by a too high ambient temperature and the internal temperature sensor responded 	<ul style="list-style-type: none"> Shut off actuator and let temperature decrease, reduce ambient temperature by suitable measures e.g. ventilation or other mounting position of the actuator
03 Actuator does not work LED lights green	<ul style="list-style-type: none"> 3-Pos control signal is wired on both entrances Required torque is greater than actuators torque Control signals are not attached or attached on a wrong conductor Actuator is incorrect mounted and is blocked by an external stop unit Actuator is clocked with more than 20 impulses <0,5 per sec. and therefore adjusted into suspend mode Interchanged supply lines 	<ul style="list-style-type: none"> Readjust/correct circuit Adjust a higher torque at the actuator if possible otherwise exchange for a type with higher torque. Examine rule and adjusting signal in accordance with attached diagram Dismount actuator and testdrive without load for operability. Install actuator accordingly that the power transmissions runs without external blockade or torsion Switch off supply voltage for at least 2 sec. thereby a reset is conducted Readjust controller in order to extend control pulses Wire 1 must be (-, N) and wire 2 (+, L)
04 Actuator does not work LED is red blinking	<ul style="list-style-type: none"> The actuator has been mounted by temperatures of less than -20°C and did not reach is operating temperatur of at least -20°C. 	<ul style="list-style-type: none"> Ensure that a constant voltage supply on conductor 1--2 is existing. Wait until the required operating temperature is achieved by the actuators internal heating system. The actuator will start operating independently
05 Y-drive in the 3-pos mode can not gear into intermediate positions	<ul style="list-style-type: none"> The conversion of constant mode on 3-pos-modus was not set 	<ul style="list-style-type: none"> Recalibrate the actuator in accordance with assembly instructions
06 Actuator sits diagonally on the squared damper shaft	<ul style="list-style-type: none"> The actuators have an angle of rotation of 95° inclusive 5° pre-tention. While assembling the pre-loading was not considered 	<ul style="list-style-type: none"> Dismount actuator of the damper, use the enclosed socket wrench to draw up approx. 5° over the hand operated control device before remounting on the damper shaft. Consider additional information „ME“ (size S) of the assembly instructions
07 A modulating actuator (Y) works with reduced angle of rotation and already reaches its end positions before 0 V/4 mA, respectively before 10V/20mA.	<ul style="list-style-type: none"> At start up no self adjustment of angle of rotation was accomplished 	<ul style="list-style-type: none"> Accomplish self adjustment of angle of rotation in accordance with assembly instruction
08 LED flashes irregularly and actuator does not work	<ul style="list-style-type: none"> Actuator does not receive sufficient supply voltage Cable to long, voltage drop in the supply line to large 	<ul style="list-style-type: none"> Increase line cross section or increase tension at the transformer/power supply unit Increase line cross section or increase tension

Over temperature, heating by low ambient temperatures

I. 3 sec. motor running time

- The 3 sec. motor running time mode is only in switch position 0 and 5 and at a constant supply voltage on terminals 1 and 2 which must be in minimum for 1 minute applied /available.
- The actuator opens at voltage on terminal 3 (resp. closes), and closes at voltage on terminal 4 (resp. opens) depending on mounting position of the actuator.
- The max. duty ratio is 10 % resp. 1 cycle / minute. Between two fully cycles to the same direction there must be a minimum intermission of 1 minute. The actuator is blocked if the break time is less than 1 minute. The release for the next cycle is made automatically by an internal timing relay.
- Same function is applied on spring return actuators. Failure safe operation is regarded same as a motor running cycle.
- If its tried to use the 1 wire On/Off methode in switch position 0 and 5, software changes the running time temporarily and automatically to 15 sec. motor running time to protect the actuator for overheating due to uncontrolled duty ratio.

II. Temperature rise

While operating the ..Max actuator following parameters have to be aligned:
At overload resp. temperature rise the actuator will remain functionless until cooling.
During cooling the LED is red.

III. Use at low ambient temperature below -20°C

- All ..Max actuators are equipped with a regulated integrated heating device designed for employments down to -40°C ambient temperature.
The heater will be supplied automatically by connecting the constant voltage supply on the clamps 1 and 2.
Following parameters are to be considered by ambient temperature < 10°C:
- After mounting the actuator must be immediately electrically connected.
 - The actuator will only be activated after the operating temperature has reached at least -20°C.
 - The adjustment options are only ensured after this heating up period.

IV. Mechanical protection

- The actuator must be operated with an outside load of at least 5 Nm.
- After installing the actuator to the damper/armature an automatic alignment has to be accomplished, in order to obtain a „gentle blockade/stop“. This function protects the damper/armature by reducing the end positions/blockade speed in order to avoid mechanical overload. The actuator aligns specifically once with 90 sec./90° onto each position, recognizes the blockade position in order to reduce the motor performance during operation briefly before reaching the end/blockade position.



ExMax/RedMax – extra information ME





The „ME“ data sheet contains additional information for ExMax and RedMax actuators of the size S, for the optimization and simplification in regard to planning, installation and initial start up. It provides influences of external factors in reference to the safe initiation of the actuators. In particular it represents the installation, as well as different dampers, fire protection dampers and armatures. Additionally describing different accessory elements and their mounting to the actuator.

For additional electrical data have a look at extra information „EL“

- Dimension, drill template
- Control elements: switch – push button – LED
- Outdoor installation
- Mounting using form-fitting shaft connection (square shaft)
- Mounting using clamp mounting (round shaft)
- Mounting on butterfly valves and ball valves
- Mounting on fire dampers
- Mounting ExBox (RedBox), ExSwitch (RedSwitch)

Dimensions – drill template

Dimension size S

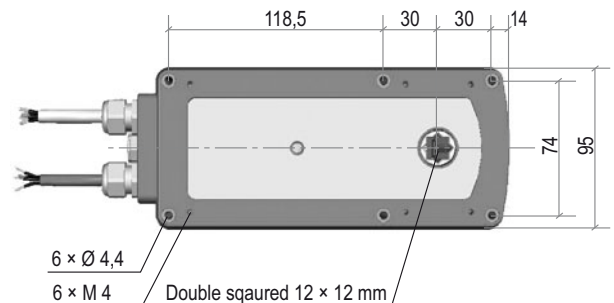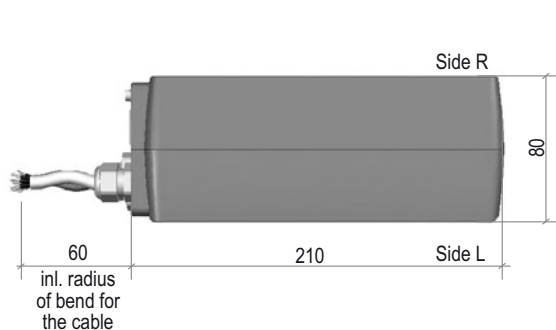


Dimensions in mm

Control elements: switch – push button – LED

Specification

All ExMax and RedMax actuators are equipped with a 10 position switch a push button and a multicolor LED for calibration. These control elements are to be found cable-laterally behind the two middle sectioned dummy plugs. For operation these must be removed. The calibration can be achieved despite lining up tension at the actuator. The explosion prevention is not impaired thereby. However it has to be of great concern that the dummy plugs must be rescrewed in order to comply with the IP-protection class. The operation of the switch and button has to be done by means of a small screwdriver. Force with strong pressure and /or rotation is to be avoided in any case, since otherwise control electronics can be damaged irreparably. By bad visibilities a flashlight (certified within the EX-range) should be used. Attitudes of torque and running time can be achieved also before mounting. The adjustment of angle of rotation can be started only with an outside load and accurate mounting.


Switch – push button – LED for programming, behind dummy plug

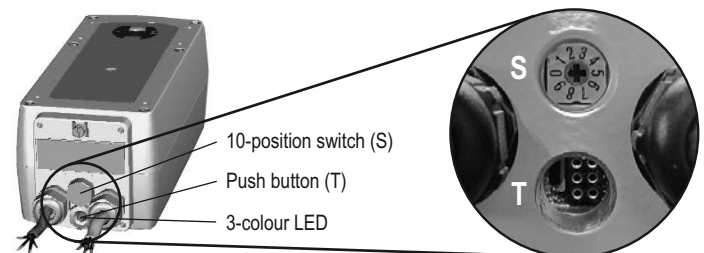

Outdoor installation

Specification

When mounting actuator outdoors it has to be certain that the actuator is protected against direct sun exposure (heat and UV), rain and snow by employing an enclosure roof. Supply voltage is to be applied immediately after mounting in order to assure integrated heating at start. Since explosion proof actuators must have internal safety temperature limiters, these may not be exposed neither at storage nor during operation to a too high temperature. Otherwise the limiters could respond and switch of the actuator irreversibly.

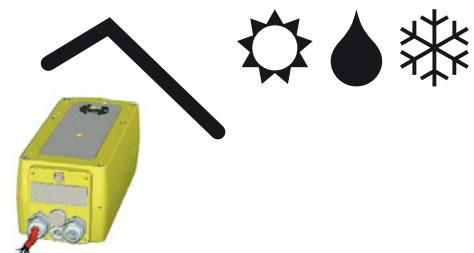




Mounting instruction for ExMax and RedMax actuators size S on air dampers

Specification

ExMax and RedMax actuators size S are equipped with a 12 × 12 mm (double square) shaft connection. The form-fitting shaft connection is the securest connection between damper shaft and actuator because slipping or slipping through is avoided compared to the force-fit clamp-connection. The actuator will be connected firmly by means of four screws M 4 × 100 (scope of supply) to the damper. For the connection to round damper shaft or square damper shaft with smaller or larger 12 × 12 mm an optional mounting clamp (type KB-S) for tensionally locked connections is available.

Form fitting mounting on square damper shaft


Dimension damper shaft

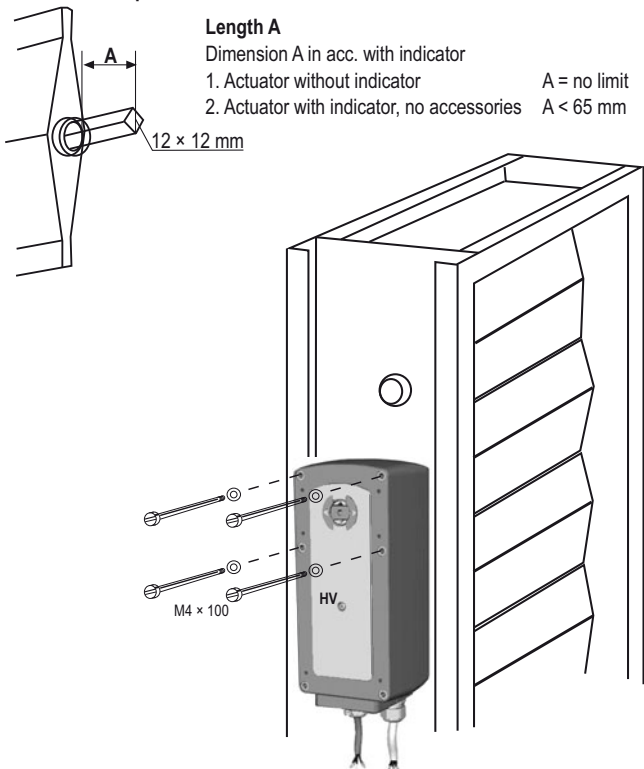


4 screws M4 × 100, as well as a socket wrench, are part of delivery for ExMax/RedMax actuators size S.
For damper shafts 9 × 9, 10 × 10 or 11 × 11 mm reducing bush are optional available.

Mounting clamp type KB-S


Dimension squared damper shaft

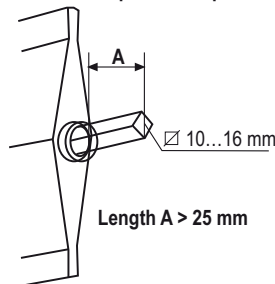


Dimension round damper shaft

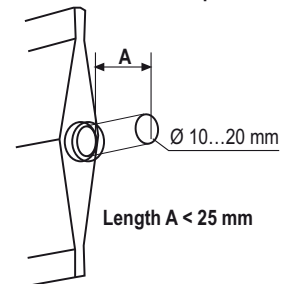


1. Pre-assembly clamp

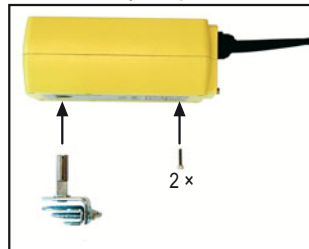


2. Fixing the clamp

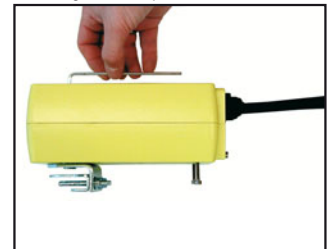

3. Pre-assembling mounting bracket

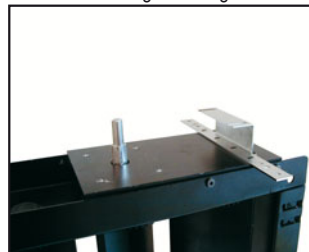

4. Mounting to the damper

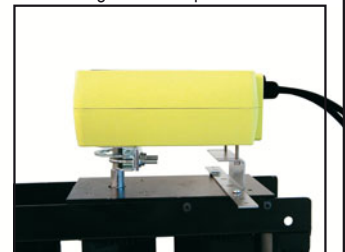

Mounting instructions form-fitting shaft connection

It is to be considered that the actuators have a total angle movement of approx. 95° in order to realize a pre-tension on the damper. Therefore the actuator sits tilted on the damper shaft. In order to prevent this and to assure pre-tension to the damper the driving shaft has to be adjusted mechanically before connecting to the damper shaft. The provided socket wrench serves for the mechanical adjustment over the hand-operated control socket HV. The actuators are axially symmetrically developed. In case of spring return function the safety position must be selected by turning the actuator 180°.

Mounting:

1. Affix tap hole M4 (in accordance with drill template) on the damper or to a mounting bracket.
2. Adjust drive shaft of the actuator with the socket wrench that the drive stands perpendicular to the damper before plugging actuator on to the damper shaft.
3. Plug actuator onto damper shaft and fix diagonally with 2 screws.
4. Remove the socket wrench.
5. Pivot and tighten the remaining screws.

Note: the drive shaft is selflocking produced and may only be mechanically adjusted either with the provided socket wrench or the optional accessory „HV-S“ manual override. External applied force to the shaft can lead to mechanical damage of the actuator.

Mounting instructions for mounting clamp

The actuators are axially symmetrically developed. In case of a spring return function the safety position must be selected by turning the actuator 180°.

Mounting

1. Insert u-bolt connection into drive-shaft and screw the bolt from the opposite side tight with the socket wrench.
2. Screw in two screws functioning as an anti twist locking device.
3. Install mounting bracket at the damper.
4. Plug the actuator to the damper shaft, adjust the actuator in the mounting brackets position and tighten the damper shaft with a wrench socket via the u-bolt connection.

Attention!

The actuator must be installed in such a way that it can implement an easy oscillating motion in the mounting bracket for the reconciliation of the not centric connection.



Note: the drive shaft is selflocking produced and may only be mechanically adjusted either with the provided socket wrench or the optional accessory „HV-S“ manual override. External applied force to the shaft can lead to mechanical damage of the actuator.



Mounting instructions for ExMax and RedMax actuators size S on butterfly valve and ball valve

Specification

ExMax and RedMax actuators of the size S are equipped with a 12 × 12 mm (double square) form-fitting shaft connection. For mounting to butterfly valves or ball valve a special mounting bracket in acc. with DIN EN ISO 5211 is required. Since this standard provides only certain basic conditions there can be substantial geometrical differences between armatures which require a special adaption.

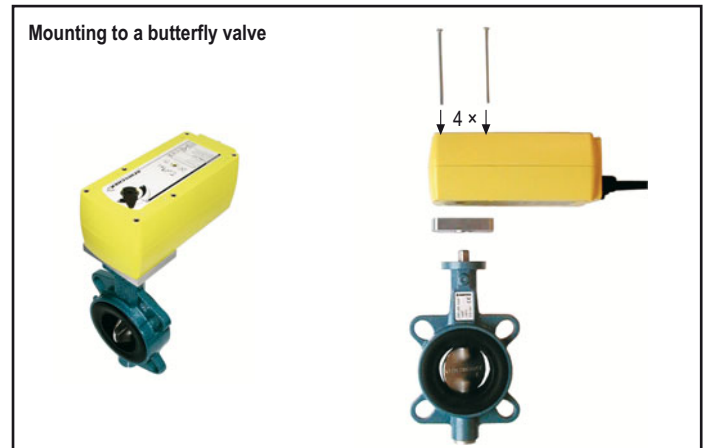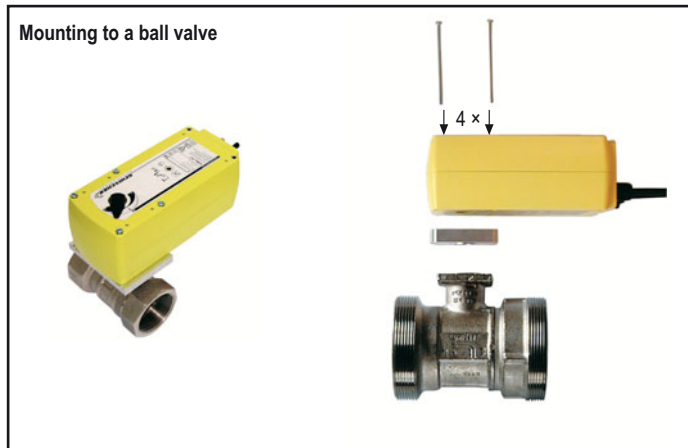

Mounting instructions for ExMax and RedMax actuators Size S on fire dampers

Specification

ExMax and RedMax actuators of the size S are equipped with a 12 × 12 mm (double square) form-fitting shaft connection. The form-fitting shaft connection is the securest connection between damper shaft and actuator. The actuator is fixed with four screws directly to the fire damper and/or fixed to a mounting bracket. ExMax-...-BF and RedMax-...-BF actuators integrate an intrinsically safe circuit in order to connect a ExPro-TT-.. sensor which works like a temperature limiter.



Assembly

It is to be considered that the actuators have a total angle of rotation of approx. 95° in order to realize a pre-tension on the damper. Therefore the actuator sits tilted on the damper shaft. In order to prevent this and to assure pre-tension to the damper the driving shaft has to be adjusted mechanically before connecting to the damper shaft. The provided socket wrench serves for the mechanical adjustment over the hand-operated control socket HV. The actuators are axially symmetrically developed. In case of a spring return function the safety position must be selected by turning the actuator 180°.

Mounting:

1. Affix tap hole M6 (in accordance with drill template) on the damper or to a mounting bracket.
2. Adjust drive shaft of the actuator with the socket wrench that the drive stands perpendicular to the damper before plugging actuator on to the damper shaft.
3. Plug actuator onto damper shaft and fix diagonally with 2 screws.
4. Remove the socket wrench.
5. Pivot and tighten the remaining screws.
6. Mount temperature limiter type Fire Safe
7. Mount terminal box
8. Wire connect actuator and sensor in the terminal box

Note: the drive shaft is selflocking and may only be mechanically adjusted either with the provided socket wrench or the optional accessory „HV-S“ manual override. External applied force to the shaft can lead to mechanical damage of the actuator.





Mounting of terminal boxes type ExBox (RedBox) via mounting bracket MKK-S to the actuator (accessory)

Specification


1. Screw mounting bracket MKK-S to the actuator (A)
then screw terminal box to the mounting bracket (B)

Mounting bracket MKK-S can be mounted every 90°

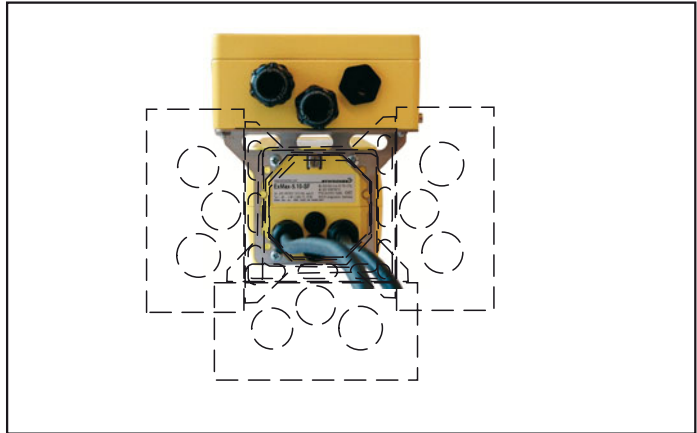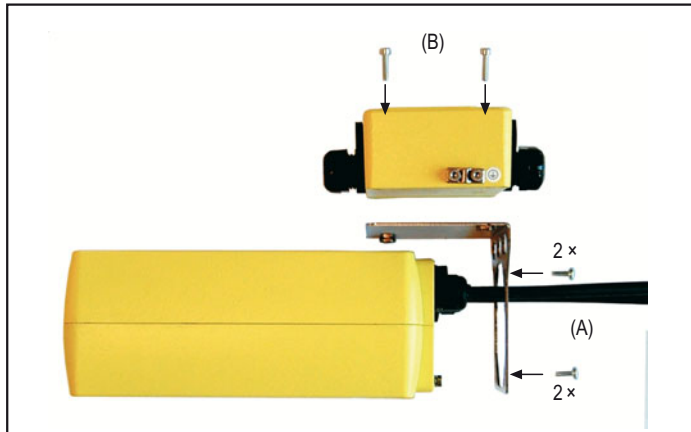

Terminal box mounted above the actuator

Terminal box mounted beside the actuator


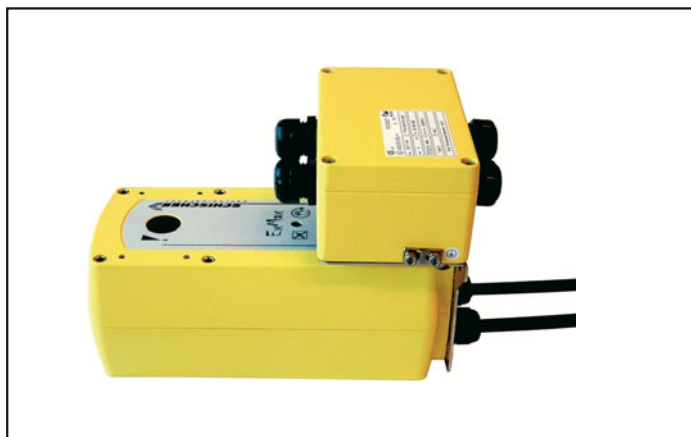


Mounting of ExSwitch (RedSwitch) accessory to the actuator

Specification

1. Put the squared connection part to the actuator, then mount ExSwitch(RedSwitch) and fix it with 4 screws

2. ExMax (RedMax) with mounted ExSwitch (RedSwitch)

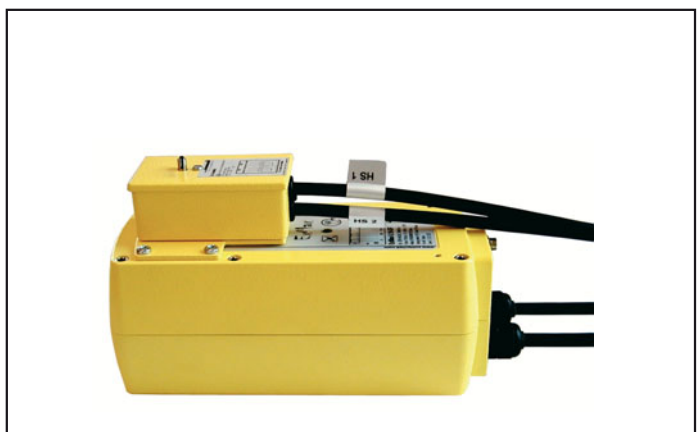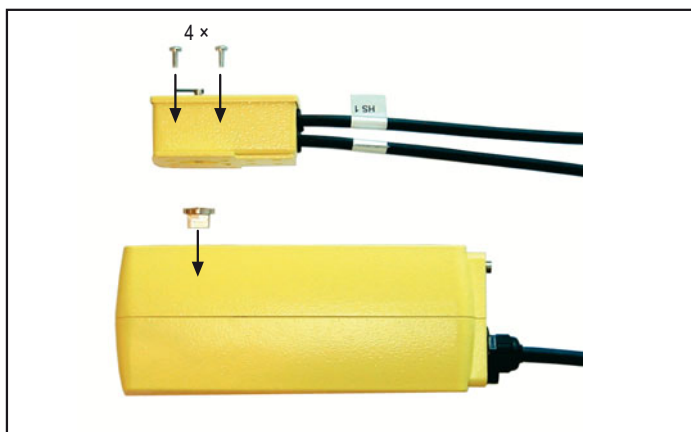

M.MZ-01.01-S-en-extra-info ME
29-okt-2010